

STOP!

DO NOT INSTALL UNTIL YOU HAVE READ THESE INSTRUCTIONS.

Call Customer Service at 1-800-465-6909
immediately if you encounter any difficulties.


Guidelines for Installation on Drywall

BEADAZZLED Leaf™ / BEADAZZLED Leaf Rain™ Flexible Glass Bead Wallcovering (MR-BDL-1 & MR-BDL-2 series)


Consult Customer Service before you begin application on surfaces other than drywall.

NOTE: This is a handmade wallcovering. Materials may display certain irregularities that are inherent to the manufacturing process.

RECOMMENDED TOOLS



Soft-bristled
nylon brush

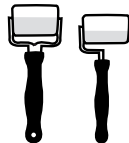

Seam roller &
corner seam roller



Plastic smoother



Sponge



Soft cloth



Razor blades



Hair Dryer



Maya Romanoff
Heavy-Duty Clear
Non-Strippable
Adhesive MR-RA-838
& 3/8" nap roller




Maya Romanoff
PRIME-TIME™
Primer MR-RA-977



Clean water



Steel straight edge




Table



Heavy-Duty
Lining paper
*Available from
Maya Romanoff*

MAYA ROMANOFF

1 GENERAL GUIDELINES

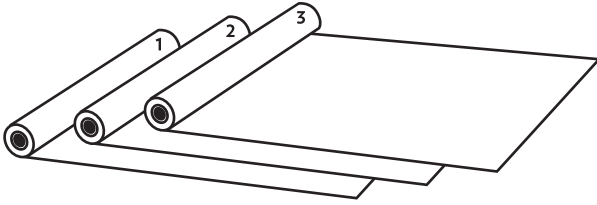

Product has been pre-graded; however, you must still grade for color flow within your installation.

Inspect goods carefully.

Confirm you have the correct quantity and color of product before installing. Additional yardage from this dye lot may not be available.

Product is not seamless.

Install within 8 weeks from date of shipment.

No allowances will be made after three (3) drops are installed.

No returns on cut goods.

No claims allowed for labor charges or consequential damages, under any conditions.


No claims allowed if lighting in area where product is hung is not finished/fully installed.

Product is not guaranteed against fading or color change.

Store material between 60° - 85° F in a dry place.

2 WALL PREPARATION

Prior to installation on new drywall, paint the walls with Maya Romanoff PRIME-TIME™ Primer (MR-RA-977) tinted close to the color of your product.

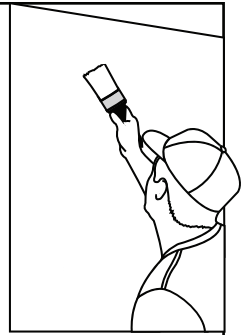

Walls should be mirror smooth (smooth and sanded).

Do not use sealing primer/do not install on sealed walls (no eggshell, satin or semi-gloss paints).

If walls are already sealed or have imperfections, we recommend hanging heavy-duty lining paper (available from Maya Romanoff) prior to installing this product.

Walls must be completely dry before installation can begin.

3 TRIMMING

Do not reverse-roll product.

Edges have been pre-trimmed for easy installation.

Table-trim from the BACKSIDE, only when necessary. This product CANNOT be double-cut on the wall.



Use a very sharp, single-edge razor blade. Use a new razor blade for each cut.

Pattern repeat on BDL-2 series is 2 inches.

4 PASTING

Use Maya Romanoff
Adhesive MR-RA-838
(Heavy-Duty Clear Non-
Strippable)

Pre-paste the wall and allow
20-30 minutes for paste to
dry before hanging.


Apply a generous, even coat of adhesive to
product and let relax.

Typical relaxing time
is 8-10 minutes, until
adhesive tacks up.
Perform a test on a
small strip to determine
appropriate relaxing time.

Allow the paste to soak
into each sheet for the
appropriate time before hanging in order to
avoid bubbling, shrinking & seam opening.

Do not crease the wallcovering.

Do not get paste on the face of the product. **If
paste gets on the face of the product, do not
scrub and do not rub.** Instead, immediately
and gently wipe clean with a soft, damp cloth.
Do not use paper towel, wet or dry, on the
product.

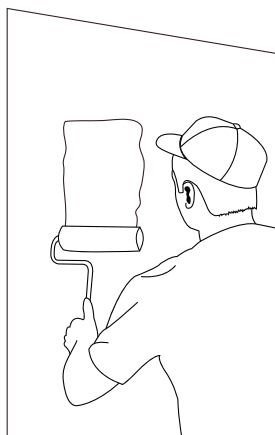

5 HANGING

Do not reverse hang.

Apply product to the wall using a soft-bristled
nylon brush.

DO NOT USE A STIFF BRUSH.

Gently smooth product with a plastic smoother
to remove bubbles.

A seam roller may be used to set seams. Please
take proper precaution.

Use a corner seam roller to ease the material
into moldings, casework, etc. prior to cutting
the top or bottom of product.

For added
flexibility and
difficult cuts,
use a hair dryer
to warm up the
product. This will
make the product
more pliable.

Once product is
adhered to the
wall, warming
seams with a hair
dryer will allow
the beads to be pushed tightly together (do
not use a heat gun). Use care!

This product is handmade. Slight color and/or
pattern match variation may occur.



STOP!

DO NOT INSTALL UNTIL YOU HAVE READ THESE INSTRUCTIONS.

Call Customer Service at 1-800-465-6909
immediately if you encounter any difficulties.

6 CEILINGS

Ceiling installations require a two-person team.

Prep ceiling with

Maya Romanoff

Adhesive MR-RA-555

(Vinyl over vinyl, Non-Strippable)

Allow 2-3 minutes to tack up.



Apply MR-RA-555 to the product. Use a 3/8" nap roller to apply adhesive to avoid getting any paste on seam lines. Getting paste on seams may cause yellowing. Typical relaxing time is 5-8 minutes.

DO NOT GET ANY PASTE ON FACE OR EDGES OF PRODUCT.

Maya Romanoff wallcovering materials are primarily formulated for dry-use areas.

Before cleaning any product, test first on a small inconspicuous area.

Avoid getting the wallcovering excessively wet.

Do not use cleaners, solvents, or chemicals of any kind to clean Maya Romanoff products.

Wallcovering may be lightly vacuumed for normal dust accumulation. Use canned air to raise any imbedded material to the surface.

This product may be cleaned by blotting the soiled area with a soft, clean cloth dampened with a weak solution of a mild, clear liquid detergent. Dry with a soft cloth.

7 CARE & CLEANING

Handle product carefully, like a silk wallcovering.

Avoid direct, bright or reflected sunlight. Our wallcoverings are not guaranteed against fading or color change.

MAYA ROMANOFF