Guidelines for Installation on Drywall

FABRICADAZZLE™

Woven Polyester Fabric (MR-FDW series)

Consult Customer Service before you begin application on surfaces other than drywall.

NOTE: This is a handmade wallcovering. Materials may display certain irregularities that are inherent to the manufacturing process.

RECOMMENDED TOOLS



Seam roller & corner seam roller



Plastic smoother



Sponge



Soft cloth



Razor blades



Heavy-Duty Lining paper Available from Maya Romanoff



Mava Romanoff Clear Stripabble Adhesive MR-RA-888 Primer MR-RA-977 & 1/2" nap roller




Mava Romanoff PRIME-TIME™



Clean water




Steel straight edge



Table

GENERAL GUIDELINES

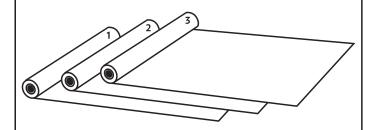

Product has been pre-graded; however, you must still grade for color flow within your installation.

Inspect goods carefully.

Confirm you have the correct quantity and color of product before installing. Additional yardage from this dye lot may not be available.

No allowances will be made after three (3) drops are installed.

No returns on cut goods.

No claims allowed for labor charges or consequential damages, under any conditions.


No claims allowed if lighting in area where product is hung is not finished/fully installed.

Product is not guaranteed against fading or color change.

Store material between 60° - 85° F in a dry place.

WALL PREPARATION

Prior to installation on new drywall, paint the walls with Maya Romanoff PRIME-TIME™
Primer (MR-RA-977) tinted close to the color of your product.

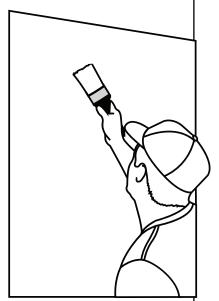

Walls should be mirror smooth (smooth and sanded).

Do not use sealing primer/do not install on sealed walls (no eggshell, satin or semi-gloss paints).

If walls are already sealed or have imperfections, we recommend hanging heavy-duty lining paper (available from Maya Romanoff) prior to installing this product.

Walls must be completely dry before installation can begin.

3 PASTING

Use Maya Romanoff Adhesive MR-RA-888 (Clear Strippable)

2

Paste the wall and allow 2-3 minutes, until adhesive tacks up, before hanging. DO NOT PASTE THE WALLCOVERING.

Do not crease the wallcovering.




Do not get paste
on the face of the
product. If paste
gets on the face
of the product, do
not scrub and do
not rub. Instead,
immediately and
gently wipe clean

with a soft, damp cloth. Do not use paper towel, wet or dry, on the product.

TRIMMING

Double-cut on the wall.

Trim 1.5 inches off
each edge.





HANGING

Pattern is
directional. Do not reverse hang.

Smooth product to the wall using a plastic smoother.



Gently smooth product with a plastic smoother to remove bubbles.

Do not smooth face of product with a stiff or bristle brush or any other textured smoothing implement.

A seam roller may be used to set seams.

Please take proper precaution.

Use a corner seam roller to ease the material into moldings, casework, etc. prior to cutting the top or bottom of product.

Slight color and/or pattern match variation may occur.

6

CARE & CLEANING

Cleaning Code W-S: Water-based cleaning agents and foam or mild water-free solvents may be used for cleaning this fabric.

Do NOT iron.

Avoid direct, bright or reflected sunlight. Our wallcoverings are not guaranteed against fading or color change.

Maya Romanoff wallcovering materials are primarily formulated for dry-use areas.

Before cleaning any product, test first on a small inconspicuous area.

Avoid getting the wallcovering excessively wet.

Do not use cleaners, solvents, or chemicals of any kind to clean Maya Romanoff products.

Wallcovering may be lightly vacuumed for normal dust accumulation.