

STOP!

DO NOT INSTALL UNTIL YOU HAVE READ THESE INSTRUCTIONS.

Call Customer Service at **1-800-465-6909**
immediately if you encounter any difficulties.


Guidelines for Installation on Drywall

DAVID ROCKWELL FOR MAYA ROMANOFF **STITCHED VERTICAL™ VINYL** Type II Vinyl Wallcovering (MR-FV-06 series)


Consult Customer Service before you begin application on surfaces other than drywall.

NOTE: Materials may display certain irregularities that are inherent to the manufacturing process.

RECOMMENDED TOOLS



Soft-bristled
nylon brush

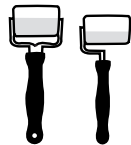

Seam roller &
corner seam roller




Plastic smoother



Sponge



Soft cloth



Razor blades



Maya Romanoff
Clear Stripable
Adhesive MR-RA-888
& 1/2" nap roller




Maya Romanoff
PRIME-TIME™
Primer MR-RA-977




Clean water



Steel straight edge




Table

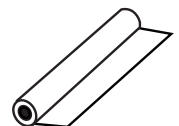

Heavy-Duty
Lining paper
*Available from
Maya Romanoff*

MAYA ROMANOFF

1 GENERAL GUIDELINES

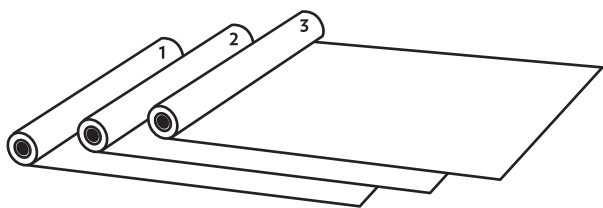

Product has been pre-graded; however, you must still grade for color flow within your installation.

Inspect goods carefully.

Confirm you have the correct quantity and color of product before installing. Additional yardage from this dye lot may not be available.

No allowances will be made after three (3) drops are installed.

No returns on cut goods.

No claims allowed for labor charges or consequential damages, under any conditions.


No claims allowed if lighting in area where product is hung is not finished/fully installed.

Product is not guaranteed against fading or color change.

Store material between 60° - 85° F in a dry place.

2 WALL PREPARATION

Prior to installation on new drywall, paint the walls with Maya Romanoff PRIME TIME™ Primer (MR-RA-977) tinted close to the color of your product.

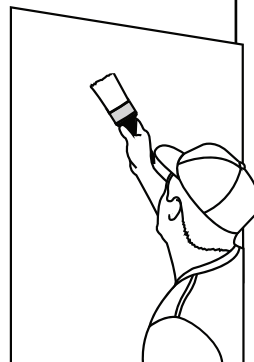

Walls should be mirror smooth (smooth and sanded).

Do not use sealing primer/do not install on sealed walls (no eggshell, satin or semi-gloss paints).

If walls are already sealed or have imperfections, we recommend hanging heavy-duty lining paper (available from Maya Romanoff) prior to installing this product.

Walls must be completely dry before installation can begin.

3 TRIMMING

Product is approximately 56"W untrimmed.

Double-cut on the wall. Trim approximately 1 inch off each edge to match pattern and achieve 54" width. See diagram on page 4.

Use a very sharp, single-edge razor blade. Use a new razor blade for each cut.



4 PASTING

Use Maya Romanoff Adhesive MR-RA-888
(Clear Strippable)

Apply a generous, even coat of adhesive to
backside of product and let relax.

Typical relaxing
time is 3-5
minutes, until
adhesive tacks
up. Perform
a test on a
small strip to
determine
appropriate
relaxing time.



Allow the paste to soak into each sheet for the
appropriate time before hanging in order to
avoid bubbling, shrinking & seam opening.

Do not crease the wallcovering.

Do not get paste on the face of the product. **If
paste gets on the face of the product, do not
scrub and do not rub.** Instead, immediately
and gently wipe clean with a soft, damp cloth.
Do not use paper towel, wet or dry, on the
product.

5 HANGING

Wallcovering rolls are marked numerically.
Please hang in sequence.

Pattern may be reverse hung.

Apply product to the wall using a soft-bristled
nylon brush.


DO NOT USE A STIFF BRUSH.

Gently smooth product with a plastic smoother
to remove bubbles.

A seam roller
may be used to
set seams. Please
take proper
precaution.

Use a corner
seam roller to
ease the material
into moldings,
casework, etc.
prior to cutting
the top or bottom of product.

Slight color and/or pattern match variation may
occur.

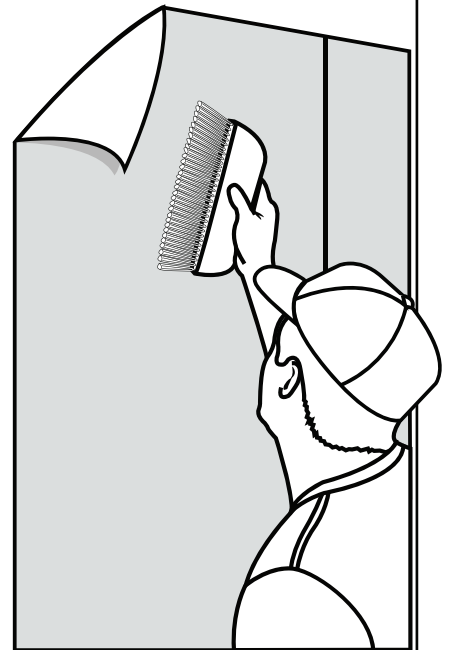

STOP!

DO NOT INSTALL UNTIL YOU HAVE READ THESE INSTRUCTIONS.

Call Customer Service at 1-800-465-6909
immediately if you encounter any difficulties.

6 CARE & CLEANING

Avoid direct, bright or reflected sunlight. Our wallcoverings are not guaranteed against fading or color change.

Maya Romanoff wallcovering materials are primarily formulated for dry-use areas.

Before cleaning any product, test first on a small inconspicuous area.


Avoid getting the wallcovering excessively wet.

Do not use cleaners, solvents, or chemicals of any kind to clean Maya Romanoff products.

This product may be cleaned by blotting the soiled area with a soft, clean cloth dampened with a weak solution of a mild, clear liquid detergent. Dry with a soft cloth.

7 PRODUCT DIAGRAM

REPEAT: 54" wide

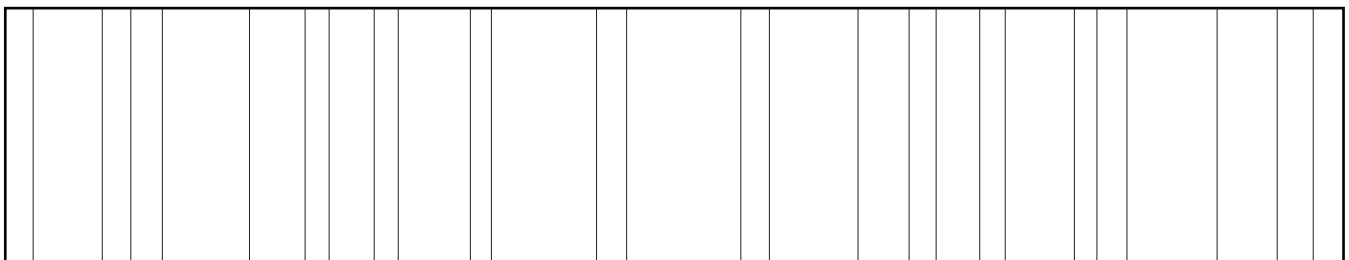

MAYA ROMANOFF