

STOP!

DO NOT INSTALL UNTIL YOU HAVE READ THESE INSTRUCTIONS.

Call Customer Service at **1-800-465-6909**
immediately if you encounter any difficulties.

Guidelines for Installation on Drywall


SHEER HEMP™ / KNOTTED HEMP™ / BRAIDED HEMP™

Hand-woven Hemp
(MR-HP-1, MR-HP-2 & MR-HP-3 series)


Consult Customer Service before you begin application on surfaces other than drywall.

NOTE: This is a handmade wallcovering. Materials may display certain irregularities that are inherent to the manufacturing process.

RECOMMENDED TOOLS



Soft-bristled
nylon brush

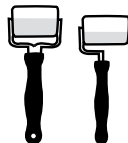


Seam roller &
corner seam roller




Sponge



Soft cloth



Razor blades

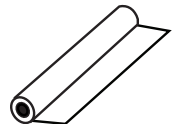

Heavy-Duty
Lining paper
*Available from
Maya Romanoff*



Maya Romanoff
Clear Stripable
Adhesive MR-RA-888
& 1/2" nap roller
**For use with
HP-1 & HP-3**



Maya Romanoff
Heavy-Duty Clear
Non-Stripable
Adhesive MR-RA-838 &
1/2" nap roller
For use with HP-2




Maya Romanoff
PRIME-TIME™
Primer MR-RA-977



Clean water




Steel straight edge



Table

MAYA ROMANOFF

1 GENERAL GUIDELINES

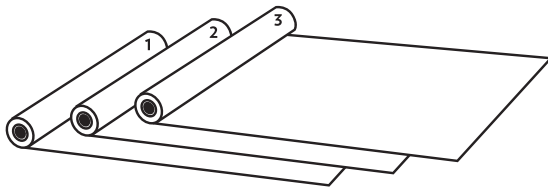

Product has been pre-graded; however, you must still grade for color flow within your installation.

Inspect goods carefully.

Confirm you have the correct quantity and color of product before installing. Additional yardage from this dye lot may not be available.

Product is not seamless.

No allowances will be made after three (3) drops are installed.

No returns on cut goods.

No claims allowed for labor charges or consequential damages, under any conditions.

No claims allowed if lighting in area where product is hung is not finished/fully installed.

Product is not guaranteed against fading or color change.

Store material between 60° - 85° F in a dry place.


2 WALL PREPARATION

Prior to installation on new drywall, paint the walls with Maya Romanoff PRIME TIME™ Primer (MR-RA-977) tinted close to the color of your product.

Walls should be mirror smooth (smooth and sanded).

Do not use sealing primer/do not install on sealed walls (no eggshell, satin or semi-gloss paints).

If walls are already sealed or have imperfections, we recommend hanging heavy-duty lining paper (available from Maya Romanoff) prior to installing this product.

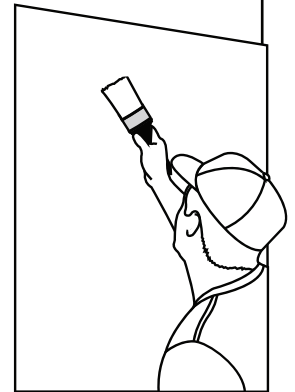


Walls must be completely dry before installation can begin.

3 TRIMMING

Do not reverse-roll product.

Table trim product from the BACKSIDE. Trim 1 to 1.5 inches off each edge.

Use a very sharp, single-edge razor blade. Use a new razor blade for each cut.

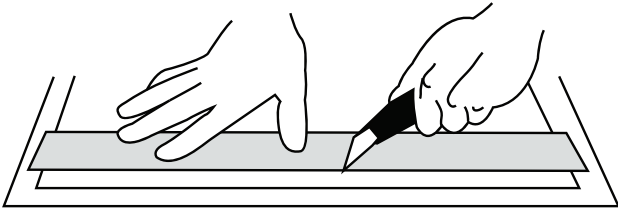

4 PASTING

For HP-1 & HP-3:

Use Maya Romanoff Adhesive
MR-RA-888 (Clear Strippable)


For HP-2:

Use Maya Romanoff Adhesive
MR-RA-838 (Heavy-Duty Clear Non-Strippable)

Pre-paste the wall and allow a minimum of
20-30 minutes for paste to dry before hanging.

Apply a generous, even coat
of adhesive to backside of
product and let relax.

Typical relaxing time for
HP-1 & HP-2 is 8-10
minutes; typical relaxing
time for HP-3 is 5-8
minutes. Perform a test on a
small strip to determine appropriate
relaxing time.

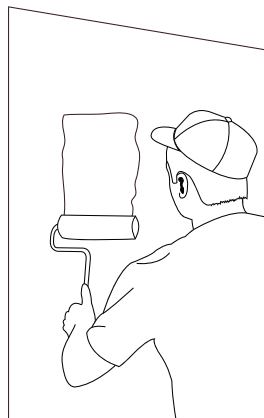

Allow the paste to soak into each sheet for
the appropriate time before hanging in order
to avoid bubbling, shrinking & seam opening.
HP-2 may require an additional coat of
adhesive.

Do not crease the wallcovering.

Do not get paste on the face of the product. **If
paste gets on the face of the product, do not
scrub and do not rub.** Instead, immediately
and gently wipe clean with a soft, damp cloth.
Do not use paper towel, wet or dry, on the
product.

5 HANGING


No side-match. Do not reverse hang.

Apply product to the wall using
a soft-bristled nylon brush.

**DO NOT USE A STIFF
BRUSH.**

Gently smooth product with
brush to remove bubbles.

A seam roller may be used to set seams. Please

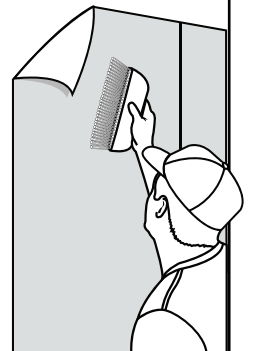

STOP!

DO NOT INSTALL UNTIL YOU HAVE READ THESE INSTRUCTIONS.

Call Customer Service at 1-800-465-6909
immediately if you encounter any difficulties.

take proper precaution.

Use a corner seam roller to ease the material into moldings, casework, etc. prior to cutting the top or bottom of product.

This product is handmade with natural fibers. Slubs/other irregularities will appear from time to time within some rolls and slight color and/or pattern match variation may occur.

small inconspicuous area.

Avoid getting the wallcovering excessively wet.

Do not use cleaners, solvents, or chemicals of any kind to clean Maya Romanoff products.

Wallcovering may be lightly vacuumed for normal dust accumulation.

This product may be cleaned by blotting the soiled area with a soft, clean cloth dampened with a weak solution of a mild, clear liquid detergent. Dry with a soft cloth.

6 CARE & CLEANING

Avoid direct, bright or reflected sunlight. Our wallcoverings are not guaranteed against fading or color change.

Maya Romanoff wallcovering materials are primarily formulated for dry-use areas.

Before cleaning any product, test first on a

MAYA ROMANOFF