

STOP!

DO NOT INSTALL UNTIL YOU HAVE READ THESE INSTRUCTIONS.

Call Customer Service at 1-800-465-6909
immediately if you encounter any difficulties.


Guidelines for Installation on Drywall

ISLAND WEAVES™ Wallcovering Woven Paper and Natural Grasses (MR-TW & MR-TK series)


Consult Customer Service before you begin application on surfaces other than drywall.

NOTE: This is a handmade wallcovering. Materials may display certain irregularities that are inherent to the manufacturing process.

RECOMMENDED TOOLS



Soft-bristled
nylon brush

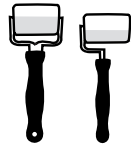

Seam roller &
corner seam roller




Plastic smoother



Sponge



Soft cloth



Razor blades



Maya Romanoff
Clear Stripable
Adhesive MR-RA-888
& 1/2" nap roller



Maya Romanoff
PRIME-TIME™
Primer MR-RA-977




Clean water



Steel straight edge




Table

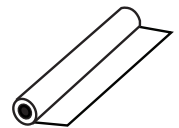

Heavy-Duty
Lining paper
*Available from
Maya Romanoff*

MAYA ROMANOFF

1 GENERAL GUIDELINES

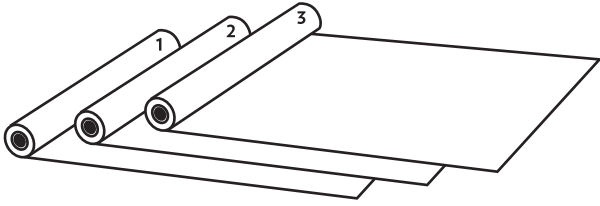

Product has been pre-graded; however, you must still grade for color flow within your installation.

Inspect goods carefully.

Confirm you have the correct quantity and color of product before installing. Additional yardage from this dye lot may not be available.

No allowances will be made after three (3) drops are installed.

No returns on cut goods.

No claims allowed for labor charges or consequential damages, under any conditions.

No claims allowed if lighting in area where product is hung is not finished/fully installed.

Product is not guaranteed against fading or color change.

Store material between 60° - 85° F in a dry place.

2 WALL PREPARATION

Prior to installation on new drywall, paint the walls with Maya Romanoff PRIME-TIME™ Primer (MR-RA-977) tinted close to the color of your product.

Walls should be mirror smooth (smooth and sanded).

Do not use sealing primer/do not install on sealed walls (no eggshell, satin or semi-gloss paints).




If walls are already sealed or have imperfections, we recommend hanging heavy-duty lining paper (available from Maya Romanoff) prior to installing this product.

Walls must be completely dry before installation can begin.

3 TRIMMING

Table trim or double-cut on the wall. Trim 3/4 to 1.5 inches off each edge.

Use a very sharp, single-edge razor blade. Use a new razor blade for each cut.

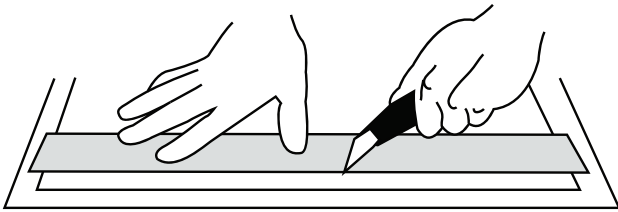

appropriate time before hanging in order to avoid bubbling, shrinking & seam opening.

Do not fold or crease the wallcovering.

Do not get paste on the face of the product. **If paste gets on the face of the product, do not scrub and do not rub.** Instead, immediately and gently wipe clean with a soft, damp cloth.

Do not use paper towel, wet or dry, on the product.

4 PASTING

Use Maya Romanoff Adhesive MR-RA-888 (Clear Strippable)



Apply a generous, even coat of adhesive to backside of product and let relax.

Typical relaxing time is 3-5 minutes, until adhesive tacks up. Perform a test on a small strip to determine appropriate relaxing time.

Allow the paste to soak into each sheet for the

5 HANGING

Pattern is directional on most colorways.

Only TW-0291 should be reverse-hung.

Apply product to the wall using a soft-bristled nylon brush.

DO NOT USE A STIFF BRUSH.

Gently smooth product with a plastic smoother to remove bubbles.



STOP!

DO NOT INSTALL UNTIL YOU HAVE READ THESE INSTRUCTIONS.

Call Customer Service at 1-800-465-6909
immediately if you encounter any difficulties.

A seam roller may be used to set seams.

Please take proper precaution.

Use a corner seam roller to ease the material into moldings, casework, etc. prior to cutting the top or bottom of product.

Slight color and/or pattern match variation may occur.

Avoid getting the wallcovering excessively wet.

Do not use cleaners, solvents, or chemicals of any kind to clean Maya Romanoff products.

Wallcovering may be lightly vacuumed for normal dust accumulation.

This product may be cleaned by blotting the soiled area with a soft, clean cloth dampened with a weak solution of a mild, clear liquid detergent. Dry with a soft cloth.

6 CARE & CLEANING

Avoid direct, bright or reflected sunlight. Our wallcoverings are not guaranteed against fading or color change.

Maya Romanoff wallcovering materials are primarily formulated for dry-use areas.

Before cleaning any product, test first on a small inconspicuous area.

MAYA ROMANOFF