

STOP

DO NOT INSTALL UNTIL YOU HAVE READ THESE GUIDELINES

Call Custom Service at **1.800.464.6909** immediately if you encounter any difficulties or e-mail clientservices@mayaromanoff.com

GUIDELINES FOR INSTALLATION ON DRYWALL. This is a handmade wallcovering. Materials may display certain irregularities that are inherent to the manufacturing process.*

Island Weaves™

(MR-TY Series) Woven Paper, Natural Grasses, and Cork



MAYA ROMANOFF

SPECIFICATIONS

Width Approx. 36" untrimmed (91.4 cm), 9 sq ft/yd (0.85 sq m/yd)

Roll Size 8 yd (7.3 m), Japanese Paperweaves 12 yd (10.9 m)

Minimum Order 16 yd (14.6 m), Japanese Paperweaves 12 yd (10.9 m)

Order Increments 8 yd (7.3 m), Japanese Paperweaves 12 yd (10.9 m)

Repeat N/A


ASTM E84 Class A

Rapidly renewable material


RECOMMENDED




Clean water



Razor Blades

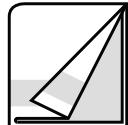


Soft cloth




Sponge



Plastic smoothen




Table



Soft-bristled nylon brush



Steel straight edge

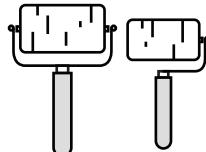


Seam roller & corner seam roller



Double cutting tool



WALL PREPARATION

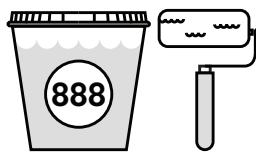

Maya Romanoff Clear Strippable Adhesive MR-RA-888 or comparable & 1/2" nap roller



Roman Pro-977 Ultra Prime Primer or comparable

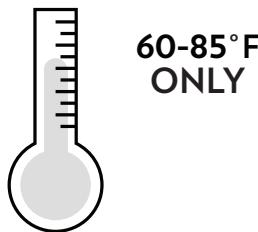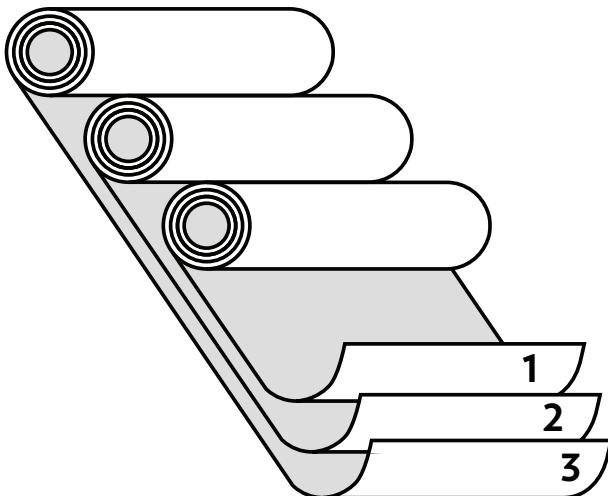1

GENERAL GUIDELINES

Product has been pre-graded from left to right, indicated by a sticker on the back. **You must still grade for color flow within your installation.**

Inspect goods carefully.

Confirm you have the correct quantity and color of product before installing. Additional yardage from this dye lot may not be available.

No allowances will be made after three (3) drops are installed. No returns on cut goods.


No claims allowed for labor charges or consequential damages, under any conditions.

No claims allowed if lighting in area where product is hung is not finished/fully installed.

Product is not guaranteed against fading or color change.

Store uninstalled material between 60° - 85°F in a dry place.

Wallcoverings must be installed in a climate controlled environment with an approximate, consistent, temperature of 70°F and relative humidity level of 50-55%

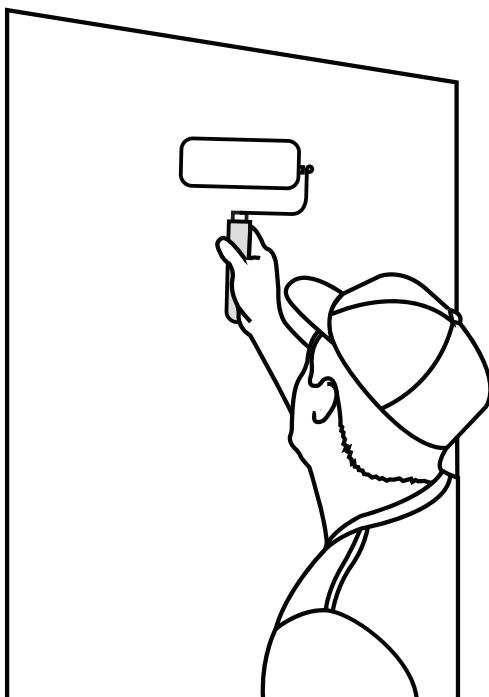2


WALL PREPARATION

Prior to installation on drywall, paint the walls with Roman Pro-977 Ultra Prime Primer or comparable tinted close to the color of your product.

Walls should be mirror smooth (smooth and sanded).

Do not use sealing primer/do not install on sealed walls (no eggshell, satin or semi-gloss paints).

Walls must be completely dry before installation can begin.

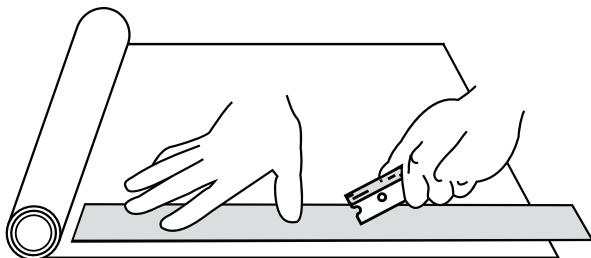3



TRIMMING

Product **MUST** be table trimmed or double-cut on the wall.

If table trimming, trim approximately $\frac{3}{4}$ to 1.5 inches off each edge, unless otherwise noted on rolls.

If double-cutting, trim approximately 1" off each edge.

Use a very sharp, single-edge razor blade. Use a new razor blade for each cut.

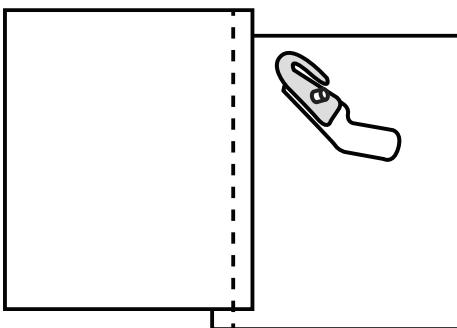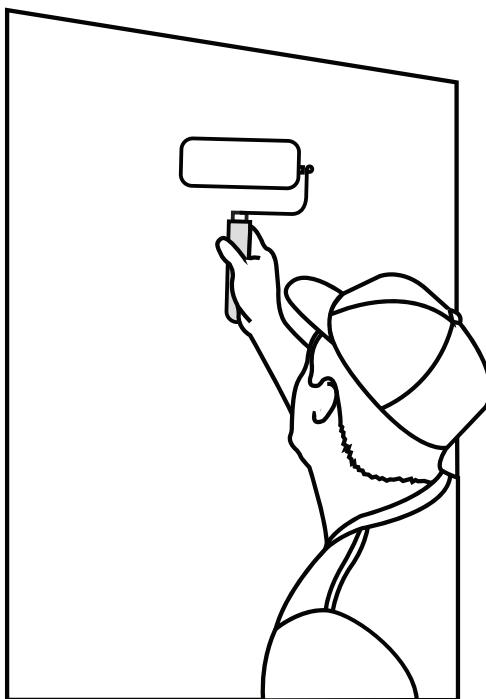OR**4**5
MINS

PASTING

Use Maya Romanoff Clear Strippable Adhesive MR-RA-888 or comparable.

Paste the wall and allow 2-3 minutes for paste to tack up before hanging. **DO NOT PASTE THE WALLCOVERING.**

Do not crease the wallcovering.

Do not get paste on the face of the product. **If paste gets on the face of the product, do not scrub and do not rub.** Instead, immediately gently wipe clean with a soft, damp cloth. Do not use paper towel, wet or dry, on the product.

Do not fold or crease the wallcovering.

Do not get paste on the face of the product. **If paste gets on the face of the product, do not scrub nor rub.** Instead, immediately gently wipe clean with a soft, damp cloth. Do not use paper towel on the product.

5



HANGING

Rolls are marked "TOP." We recommend pattern to be straight hung or random hang. DO NOT reverse hang.

Apply product to the wall using a soft-bristled nylon brush. **Do not use a stiff brush.**

Gently smooth product with a plastic smoother to remove bubbles.


A seam roller may be used to set seams. Please take proper precaution.

Go back and ensure all bubbles are smoothed out before leaving. Any bubbles left upon completion of install will be permanent.

Use a corner seam roller to ease the material into moldings, casework, etc. prior to cutting the product.

Slight color and/or pattern match variation may occur, due to the product being manufactured with natural materials.

6

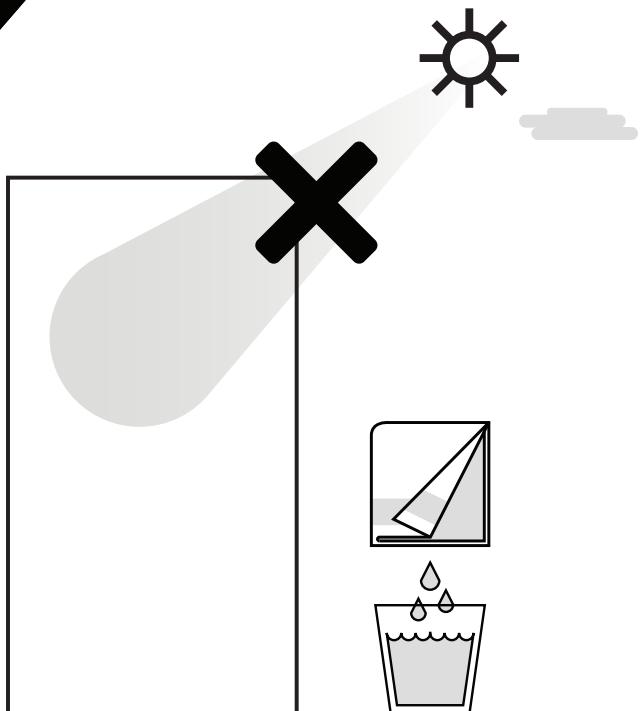

CARE & CLEANING

Avoid direct, bright or reflected sunlight. Our wallcoverings are not guaranteed against fading or color change.

Maya Romanoff wallcovering materials are primarily formulated for dry-use areas.

Before cleaning any product, test first on a small inconspicuous area.

Avoid getting the wallcovering excessively wet.

Do not use cleaners, solvents, or chemicals of any kind for clean Maya Romanoff products.

This product may be cleaned by blotting the soiled area with a soft, clean cloth dampened with a weak solution of a mild, clear liquid detergent. Dry with a soft cloth.