

# STOP

DO NOT INSTALL UNTIL YOU HAVE READ THESE GUIDELINES

Call Client Services at 1.773.465.6909 immediately if you encounter any difficulties or e-mail [clientservices@mayaromanoff.com](mailto:clientservices@mayaromanoff.com)

**GUIDELINES FOR INSTALLATION ON DRYWALL.\*** Materials may display certain irregularities that are inherent to the manufacturing process.

## Cozy™ Day Dreamer

(MR-CZ-5 Series) Woven Wool Wallcovering & Upholstery



### SPECIFICATIONS

Width Approx. 60" untrimmed (152.4 cm), Approx. 54" trimmed (137.2 cm),  
13.5 sq ft/yd (1.3 sq m/yd)

Roll Size 21 yd (19.2 m)

Minimum Order 6 yd (5.5 m)

Order Increments 3 yd (2.7 m)


Repeat 27" W x 27" H (68.6 cm x 68.6 cm)

Custom Color/Length Contact Client Services


Fire Rating ASTM E84 Class A

Content 75% Wool, 25% Polyester, Polyester non-woven fabric backing


### RECOMMENDED TOOLS

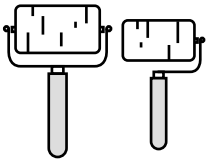


Seam roller & corner seam roller

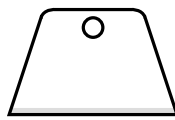

Plastic smoother

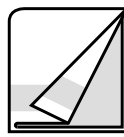


Soft cloth



Sponge




Clean water



Razor blades




Double cutting tool

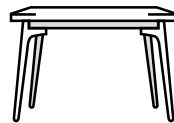

Table




Steel straight edge



Soft-bristled nylon brush

### WALL PREPARATION

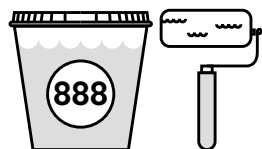



Maya Romanoff Clear Strippable Adhesive MR-RA-888 or comparable & 1/2" nap roller



Roman Pro-977 Ultra Prime Primer or comparable

\*Consult Client Services before you begin application on surfaces other than drywall.

1

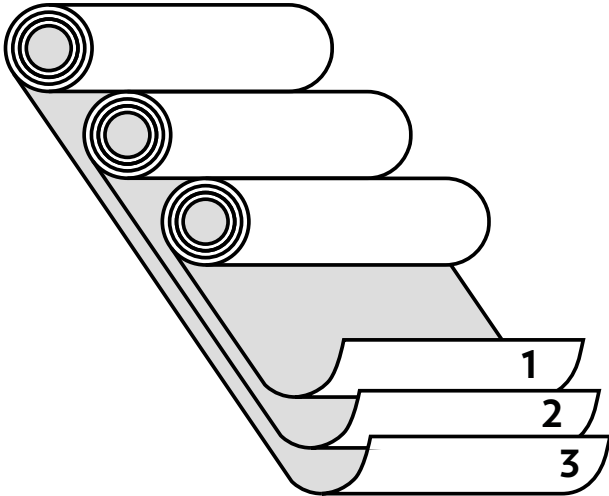

60-85°F<sup>F</sup>  
ONLY

## GENERAL GUIDELINES

Product has been pre-graded from left to right and labeled accordingly on the back. **You must still grade for color flow within your installation.**

---

Inspect goods carefully.

---

Confirm you have the correct quantity and color of product before installing. Additional yardage from this dye lot may not be available.

---

No allowances will be made after three (3) drops are installed. No returns on cut goods.

---

No claims allowed for labor charges or consequential damages, under any conditions.

---

No claims allowed if lighting in area where product is hung is not finished/fully installed.

---

Product is not guaranteed against fading or color change.


---

Store uninstalled material between 60° - 85°F in a dry place.

---

Wallcovering **MUST** be installed in a climate controlled environment with an approximate constant temperature of 70° F and a relative humidity level of 50-55%.

2

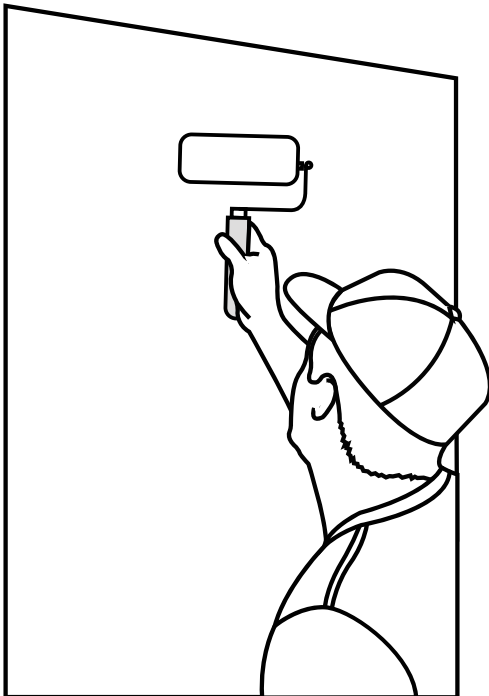

## WALL PREPARATION

Prior to installation on drywall, paint the walls with Roman Pro-977 Ultra Prime Primer or comparable tinted close to the color of your product.

---

Do not use sealing primer/do not install on sealed walls (no eggshell, satin or semi-gloss paints).


---

Walls should be smooth and sanded.


---

Walls must be completely dry before installation can begin.

3

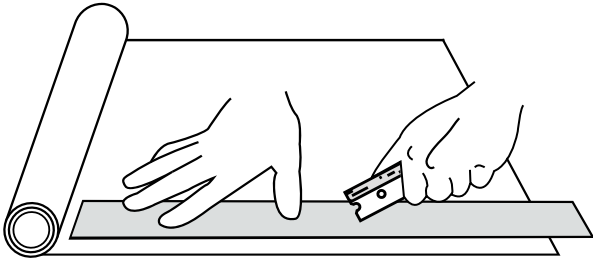

OR

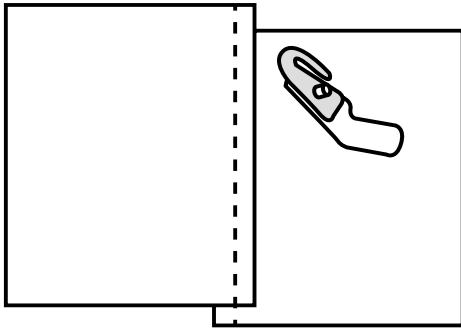

## TRIMMING

Variation in the fabric width will occur; please use printed pattern as your guide for trimming.

---

Product **MUST** be table trimmed or double-cut on the wall.

---

If table trimming, trim approximately 1.5" off each edge, unless otherwise noted on rolls.

---

If double-cutting, trim approximately 1" off each edge.


---

Use a very sharp, single-edge razor blade. Use a new razor blade for each cut.

---

See Step #7 for Trimming Diagrams.

4

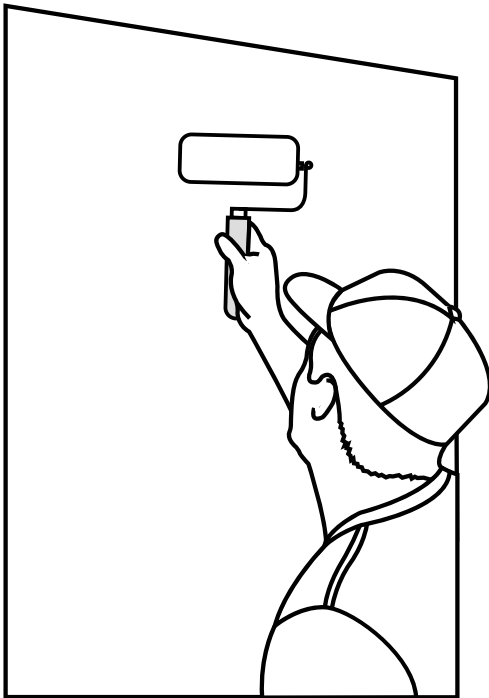

## PASTING

Use Maya Romanoff Clear Strippable Adhesive MR-RA-888 or comparable.

---

Paste the wall and allow 2-3 minutes for paste to tack up before hanging. **DO NOT PASTE THE WALLCOVERING.**

---

Do not fold or crease the wallcovering.

---

Do not get paste on the face of the product. **If paste gets on the face of the product, do not scrub and do not rub.** Instead, immediately gently wipe clean with a soft, damp cloth. Do not use paper towel, wet or dry, on the product.

5



## HANGING

All patterns are directional. Rolls are marked "TOP." Material has side-match. Do not reverse hang.

Apply product to the wall using a soft-bristled nylon brush. **Do not use a stiff brush.**

Gently smooth product with a plastic smoother to remove bubbles.

A seam roller may be used to set seams. Please take proper precaution.


Go back and ensure all bubbles are smoothed out before leaving. Any bubbles left upon completion of install will be permanent.

Use a corner seam roller to ease the material into moldings, casework, etc. prior to cutting the product.

The color of the product may bleed onto the wall while hanging. **This is normal and will not affect the final installation.**

Slight color and/or pattern match variation may occur.

6

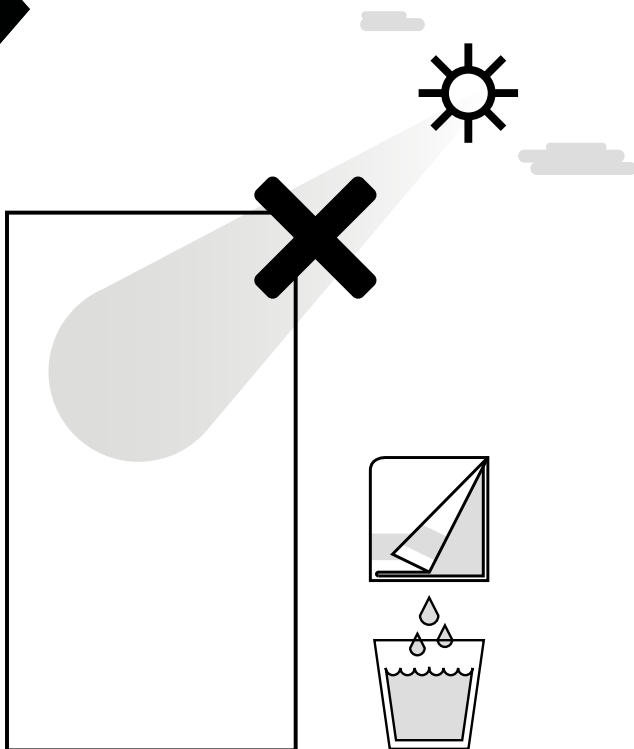

## CARE & CLEANING

Avoid direct or reflected sunlight. Our wallcoverings are not guaranteed against fading or color change.

Maya Romanoff wallcoverings are formulated for dry-use areas.

Before cleaning any wallcoverings, test first on a small, inconspicuous area.

Avoid getting the wallcovering excessively wet.

Never use abrasive cleansers or steel wool as they will mar the surface.

Clean by blotting the soiled area with a soft, clean cloth, dampened with a mild solution of clear liquid detergent. Dry with a soft, clean cloth.

Do not use harsh cleaners, solvents, or chemicals of any kind to clean Maya Romanoff products unless following the guidelines outlined in our Care, Cleaning and Disinfecting document, available at [MayaRomanoffDropbox.com](https://www.mayaromanoff.com/dropbox). When used as directed, disinfectant wipes and diluted bleach/water solutions can be safe and effective sanitization methods for the majority of our wallcoverings.

Day Dreamer

Approx. 54"

