

#### DO NOT INSTALL UNTIL YOU HAVE READ THESE GUIDELINES

Call Client Services at **1.773.465.6909** immediately if you encounter any difficulties or e-mail **clientservices@mayarmanoff.com** 

#### GUIDELINES FOR INSTALLATION ON DRYWALL.\* Materials may display certain irregularities that are inherent to the manufacturing process.

# Mother of Pearl Chevron<sup>™</sup> & Mosaic<sup>™</sup>

(MR-MC, MR-MM Series) Tiles of Genuine Seashell



#### SPECIFICATIONS

Tile Size Approx. 18" x 18" (45.7 x 45.7 cm), 2.3 sq ft/per tile (0.2 sq m/per tile)

Minimum Order 20 tiles

Order Increments 10 tiles

Repeat MC 9" W (22.9 cm), MM 1" W x 1" H (2.5 cm x 2.5 cm)

Custom Color 20 tile min. order	
Custom Tile Size Contact Customer Service	
Fire Rating ASTM E84 Class A	
Content Hand-inlaid, genuine, farmed seashells, Non-woven paper backing	

#### RECOMMENDED TOOLS



Clean water



Table

Razor Blades



Optional Water-Based Polyurethane Available from Benjamin Moore




Steel straight edge



Sponge

Seam roller &

corner seam roller



Plastic smoother



Soft-bristled nylon brush


#### WALL PREPARATION



Maya Romanoff Vinyl-Over-Vinyl Non-Strippable Adhesive MR-RA-555 or comparable & 1/2" nap roller



Roman Pro-977 Ultra Prime Primer or comparable



60-85°F

ONLY





Boxes of tiles have been pre-graded and labeled accordingly on the back. You must still grade for color flow within your installation.

Inspect goods carefully.

Confirm you have the correct quantity and color of product before installing. Additional tiles from this dye lot may not be available.

Product is not seamless.

Install within 4 weeks from date of shipment.

No allowances will be made after four (4) tiles are installed. No returns on cut goods.

No claims allowed for labor charges or consequential damages, under any conditions.

No claims allowed if lighting in area where product is hung is not finished/fully installed.

Product is not guaranteed against fading or color change.

Store uninstalled material between 60° - 85° F in a dry place.

Wallcovering **MUST** be installed in a climate controlled environment with an approximate constant temperature of 70°F and a relative humidity level of 50-55%.

## WALL PREPARATION


Prior to installation on new drywall, paint the walls with Roman Pro-977 Ultra Prime Primer or comparable tinted close to the color of your product.

Walls should be mirror smooth (smooth and sanded).

Do not use sealing primer/do not install on sealed walls (no eggshell, satin or semi-gloss paints).

Walls must be completely dry before installation can begin.



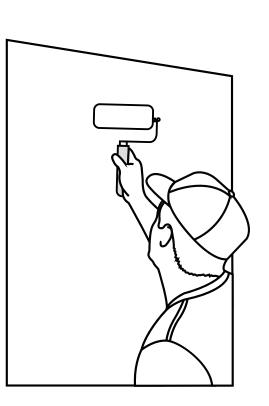



# TRIMMING

Edges have been pre-trimmed for easy installation.

Table-trim product from the **BACK SIDE**, only when necessary. This product **CANNOT** be double-cut on the wall.

Lightly sand edges with a sanding block or 100-grit (or finer) sand paper to more closely join tiles.

Use a very sharp, single-edge razor blade. Use a new razor blade for each cut.

Trim off scallops to achieve straight tile edge for areas that do not overlap.



# PASTING

Use Maya Romanoff Adhesive MR-RA-555 (Vinyl-Over-Vinyl Non-Strippable) or comparable.


Apply a generous, even coat of adhesive to backside of product and let relax.

Typical relaxing time is 2 minutes, until adhesive tacks up. Perform a test on a small strip to determine appropriate relaxing time.

Allow the paste to soak into each tile for the appropriate time before hanging in order to avoid bubbling, shrinking & seam opening.

Do not crease the tiles.

Do not get paste on the face of the product. **If paste gets on the face of the product, do not scrub and do not rub.** Instead, immediately and gently wipe clean with a soft, damp cloth. Do not use paper towel, wet or dry, on the product.

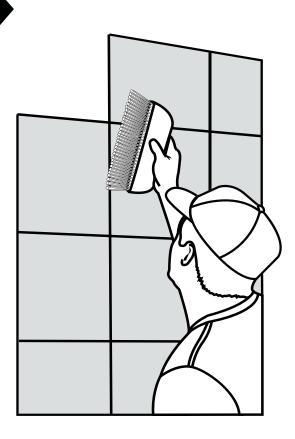

# HANGING

Chevron (MC) pattern is directional. Mosaic (MM) pattern is not directional.

See installation diagrams on page 4.

Apply product to the wall using a soft-bristled nylon brush.

#### DO NOT USE A STIFF BRUSH.

Gently smooth product with a plastic smoother to remove bubbles.

A seam roller may be used to set seams. Please take proper precaution.

This product is handmade from natural shell. Slight color and/or pattern match variation may occur.


# CORNER INSTALLATION


For inside corners, cut tiles to size and join the pieces end to end.

For outside corners and square columns, cut tiles to size and join the pieces together at the corner, taking care not to leave the wall exposed. A suitably colored sealant MUST be applied to seal the corner. We recommend Zinsser Bulls Eye® Shellac for white shell tiles and Bulls Eye® Amber Shellac for gold shell tiles (available through "http://www.zinsser.com" www. zinsser.com). Please apply it with extreme care. Immediately after applying, wash the area down with soapy water to remove any residue; not doing so may result in permanent damage to the tiles.

This product can be applied to round columns with a diameter not smaller than 18 inches. Extend relaxing time by 5 minutes and slowly work the tile around the curve. If adhesion is needed on the curve, it may be primed with MR-RA-555 (Vinyl-Over-Vinyl Non-Strippable) adhesive in addition to pasting the back of the tile.

Cut off any protruding flakes with a sharp razor blade (DO NOT PEEL); then, apply water-based polyurethane to the area to seal.

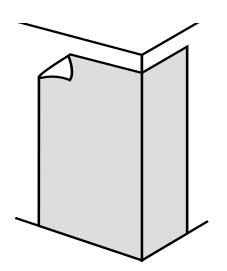

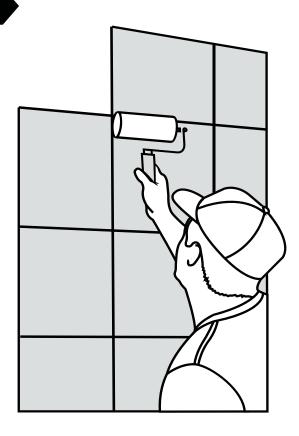

### ADDITIONAL PROTECTIVE COATING APPLICATION GUIDELINES

A thin layer of water-based polyurethane may be applied to the installed wall tiles 48 hours after product installation (wallcovering adhesive must be dry). This will form a barrier coat and help prevent moisture from penetrating between the tiles.

We recommend Benwood Acrylic Polyurethane (available through Benjamin Moore) or a good quality, water-based acrylic polyurethane. Different finishes are available.

Perform a test on scrap material before applying to the installed surface.

Apply a generous coat to installed product with a foam or nap roller. Smooth polyurethane with a 4" foam brush.

After smoothing once, go back over the area several times before it is dry, with a softer touch each time. This allows for even polyurethane application and catches any drips.

If extra protection is desired, re-apply a second coat after another 48 hours of curing.

Consult the polyurethane manufacturer's application guidelines. Maya Romanoff is not responsible for unsatisfactory results.

Maya Romanoff wallcoverings are primarily formulated for dry-use areas. The above guidelines are not a guarantee of waterproofing.

# CARE & CLEANING

Avoid direct or reflected sunlight. Our wallcoverings are not guaranteed against fading or color change.

Maya Romanoff wallcoverings are formulated for dry-use areas.


Before cleaning any wallcoverings, test first on a small, inconspicuous area.

Avoid getting the wallcovering excessively wet.

Never use abrasive cleansers or steel wool as they will mar the surface.


Clean by blotting the soiled area with a soft, clean cloth, dampened with a mild solution of clear liquid detergent. Dry with a soft, clean cloth.

Do not use harsh cleaners, solvents, or chemicals of any kind to clean Maya Romanoff products unless following the guidelines outlined in our Care, Cleaning and Disinfecting document, available at <u>MayaRomanoffDropbox.com</u>. When used as directed, disinfectant wipes and diluted bleach/water solutions can be safe and effective sanitization methods for the majority of our wallcoverings.

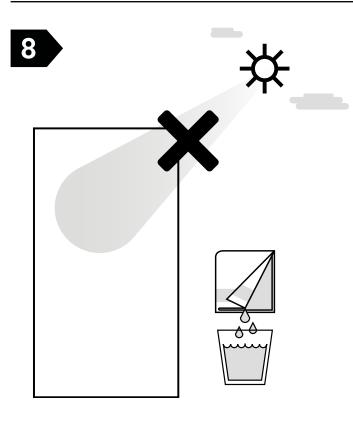


#### MR-MM

Straight

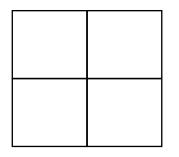


#### Staggered

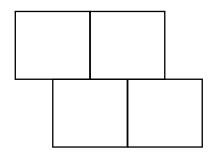


### MR-MC

Straight

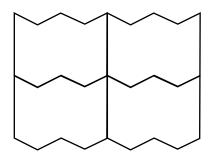

#### Staggered

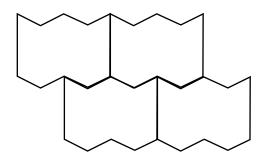

Start in the upper left corner of the wall and work in horizontal rows from left to right. After covering width of the wall, start second row below the first row from left to right.

Repeat: Approximately 18" x 18"