

STOP

DO NOT INSTALL UNTIL YOU HAVE READ THESE GUIDELINES

Call Client Services at 1.773.465.6909 immediately if you encounter any difficulties or e-mail clientservices@mayaromanoff.com

GUIDELINES FOR INSTALLATION ON DRYWALL.*

Materials may display certain irregularities that are inherent to the manufacturing process.

Wallmica™

(MR-SK Series) Natural Silica Mica



MAYA ROMANOFF

SPECIFICATIONS

Width Approx. 36" untrimmed (91.4 cm), 9 sq ft/yd (0.8 sq m/yd)

Roll Size 21 yd (19.2 m)

Minimum Order 15 yd (13.7 m)

Order Increments 3 yd (2.7 m)

Repeat N/A

Custom Length Contact Client Services


Fire Rating ASTM E84 Class A

Content Natural silica mica, Paper backing

RECOMMENDED TOOLS




Clean water




Razor Blades




Soft cloth



Sponge



Plastic smoother

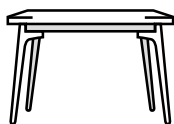


Table




Optional Water-Based
Polyurethane
Available from Benjamin Moore



Steel straight edge

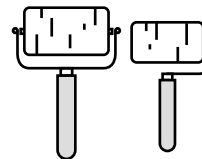


Seam roller &
corner seam roller



Soft-bristled nylon brush

WALL PREPARATION

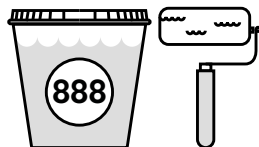

Maya Romanoff Clear Stripable
Adhesive MR-RA-888 or comparable
& 1/2" nap roller





Roman Pro-977 Ultra Prime Primer
or comparable

*Consult Client Services before you begin application on surfaces other than drywall.

02.20.2024

1

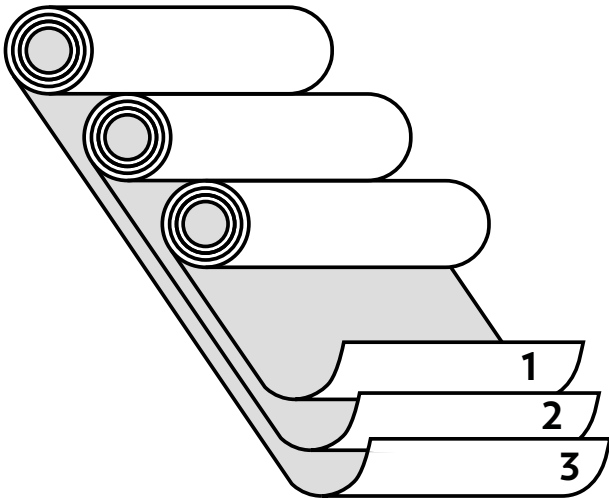

60-85°F
ONLY

GENERAL GUIDELINES

Product has been pre-graded from left to right and labeled accordingly on the back. **You must still grade for color flow within your installation.**

Inspect goods carefully.

Confirm you have the correct quantity and color of product before installing. Additional yardage from this dye lot may not be available.

No allowances will be made after three (3) drops are installed. No returns on cut goods.

No claims allowed for labor charges or consequential damages, under any conditions.


No claims allowed if lighting in area where product is hung is not finished/fully installed.

Product is not guaranteed against fading or color change.

Store uninstalled material between 60° - 85°F in a dry place.

Wallcovering **MUST** be installed in a climate controlled environment with an approximate constant temperature of 70°F and a relative humidity level of 50-55%.

2

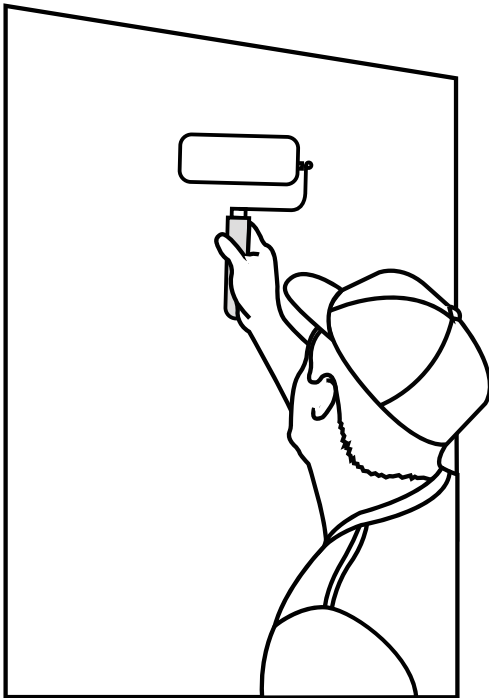

WALL PREPARATION


Prior to installation on drywall, paint the walls with Roman Pro-977 Ultra Prime Primer or comparable tinted close to the color of your product.

Do not use sealing primer/do not install on sealed walls (no eggshell, satin or semi-gloss paints).

Walls should be smooth and sanded. If walls are already sealed or have imperfections, consider hanging heavy-duty non-woven wall liner (available from Maya Romanoff) prior to installing the product. This is at the discretion of your installer.

Walls must be completely dry before installation can begin.

3

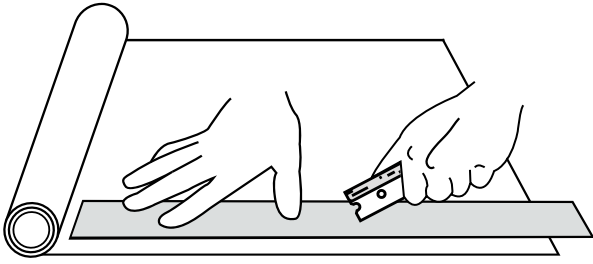

TRIMMING

Product **MUST** be table trimmed

Table trim 1/2 to 3/4 inches off each edge

Use a very sharp, single-edge razor blade. Use a new razor blade for each cut.

4



PASTING

Use Maya Romanoff Adhesive MR-RA-888 (Clear Strippable) or comparable.

Apply a generous, even coat of adhesive to backside of product and let relax.

Typical relaxing time is approximately 5 minutes, until adhesive tacks up. Perform a test on a small strip to determine appropriate relaxing time.

Allow the paste to soak into each sheet for the appropriate time before hanging in order to avoid bubbling, shrinking & seam opening.

Do not fold or crease the wallcovering.

Do not get paste on the face of the product. **If paste gets on the face of the product, do not scrub nor rub.** Instead, immediately gently wipe clean with a soft, damp cloth. Do not use paper towel on the product.



5



HANGING

No side-match. Pattern is not directional and may be reverse-hung.

Apply product to the wall using a soft-bristled nylon brush.

DO NOT USE A STIFF BRUSH.


Do not use a seam roller to set seams. Instead, use a plastic smoother.

Gently smooth product with a plastic smoother to remove bubbles.

Use a corner seam roller to ease the material into moldings, casework, etc. prior to cutting the top or bottom of product.

Slight color and/or pattern match variation may occur from panel to panel.

6

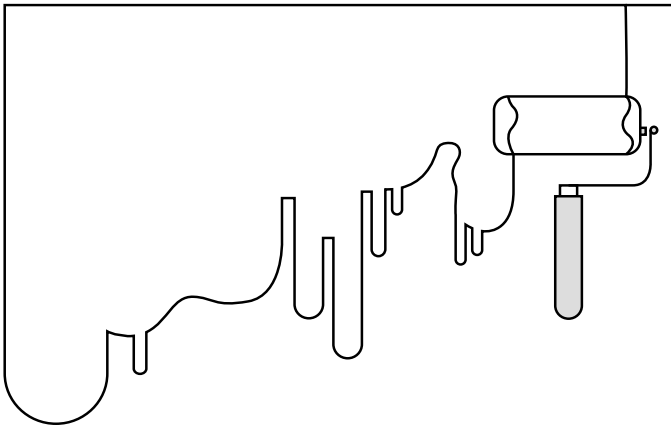


ADDITIONAL PROTECTIVE COATING APPLICATION GUIDELINES

At the client or installer's discretion, a thin layer of water-based polyurethane may be applied to the installed wallcovering 48 hours after product installation (wallcovering adhesive must be dry). This will form a barrier coat and help prevent moisture from penetrating the wood inlay.

We recommend Benwood Acrylic Polyurethane- Low Luster (available through Benjamin Moore) or a good quality, water-based acrylic polyurethane. Different finishes are available.

Perform a test on scrap material before applying to the installed surface. Applying the topcoat may result in visible brush strokes and/or a deepening of the original color.

Apply a generous coat to installed product with a foam or nap roller.

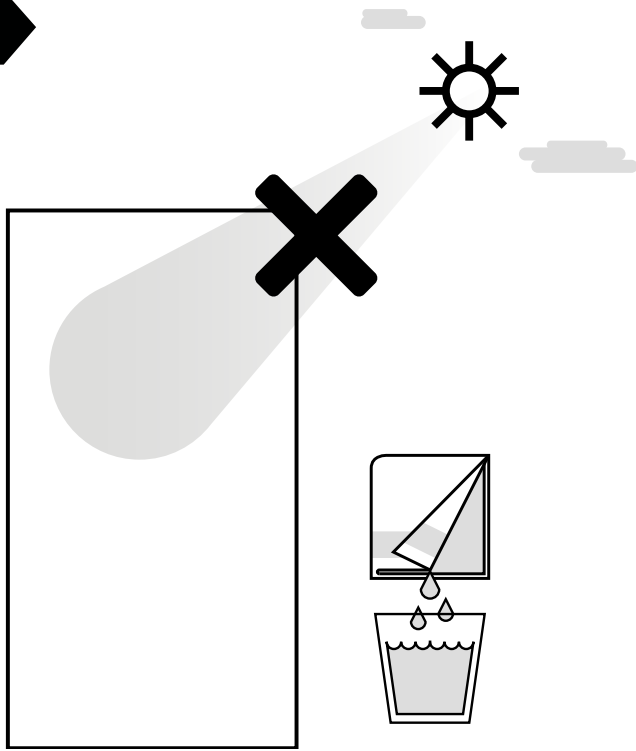

CARE & CLEANING

Avoid direct or reflected sunlight. Our wallcoverings are not guaranteed against fading or color change.

Maya Romanoff wallcoverings are formulated for dry-use areas.

Before cleaning any wallcoverings, test first on a small, inconspicuous area.

Avoid getting the wallcovering excessively wet.

Never use abrasive cleansers or steel wool as they will mar the surface.

Clean by blotting the soiled area with a soft, clean cloth, dampened with a mild solution of clear liquid detergent. Dry with a soft, clean cloth.

Do not use harsh cleaners, solvents, or chemicals of any kind to clean Maya Romanoff products unless following the guidelines outlined in our Care, Cleaning and Disinfecting document, available at [MayaRomanoffDropbox.com](https://www.mayaromanoff.com/resources/care-cleaning-and-disinfecting). When used as directed, disinfectant wipes and diluted bleach/water solutions can be safe and effective sanitization methods for the majority of our wallcoverings.

