

STOP

DO NOT INSTALL UNTIL YOU HAVE READ THESE GUIDELINES

Call Client Services at 1.773.465.6909 immediately if you encounter any difficulties or e-mail clientservices@mayaromanoff.com

GUIDELINES FOR INSTALLATION ON DRYWALL.* Materials may display certain irregularities that are inherent to the manufacturing process.

Island Weaves™

(MR-TY Series) Woven Paper, Natural Grasses, and Cork



MAYA ROMANOFF

SPECIFICATIONS

Width Approx. 36" untrimmed (91.4 cm), 9 sq ft/yd (0.9 sq m/yd)

Roll Size 8 yd (7.3 m), Japanese Paperweaves 12 yd (10.9 m)

Minimum Order 16 yd (14.6 m), Japanese Paperweaves 12 yd (10.9 m)

Order Increments 8 yd (7.3 m), Japanese Paperweaves 12 yd (10.9 m)

Repeat N/A


Fire Rating ASTM E84 Class A

Content Sisal, Jute, Abaca, Hemp, Synthetic/Viscose Rayon, Cork, Raffia, Boodle, Burlap, Paperweave, Japanese Paperweave, Paper backing

RECOMMENDED TOOLS




Clean water




Razor Blades




Soft cloth




Sponge




Plastic smoother

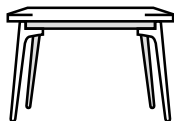


Table



Soft-bristled nylon brush



Steel straight edge

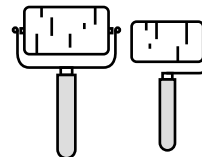


Seam roller &
corner seam roller



Double cutting tool

WALL PREPARATION

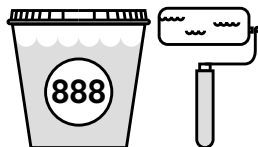

Maya Romanoff Clear Strippable
Adhesive MR-RA-888
or comparable & 1/2" nap roller





Roman Pro-977 Ultra Prime Primer
or comparable

*Consult Client Services before you begin application on surfaces other than drywall.

02.23.2024

1

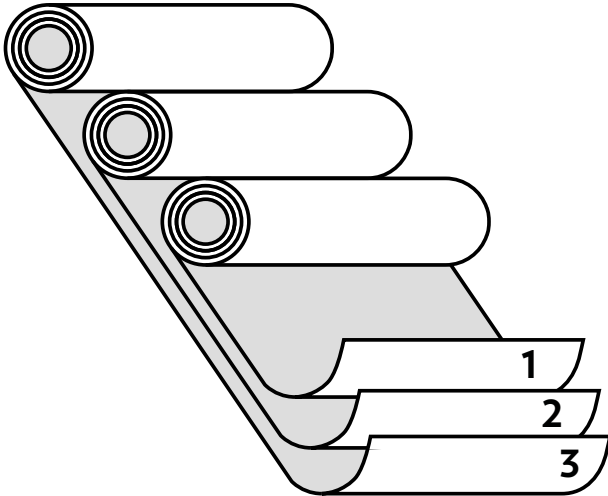

60-85°F
ONLY

GENERAL GUIDELINES

Product has been pre-graded from left to right and labeled accordingly on the back. **You must still grade for color flow within your installation.**

Inspect goods carefully.

Confirm you have the correct quantity and color of product before installing. Additional yardage from this dye lot may not be available.

No allowances will be made after three (3) drops are installed. No returns on cut goods.

No claims allowed for labor charges or consequential damages, under any conditions.


No claims allowed if lighting in area where product is hung is not finished/fully installed.

Product is not guaranteed against fading or color change.

Store uninstalled material between 60° - 85°F in a dry place.

Wallcoverings must be installed in a climate controlled environment with an approximate, consistent, temperature of 70°F and relative humidity level of 50-55%

2

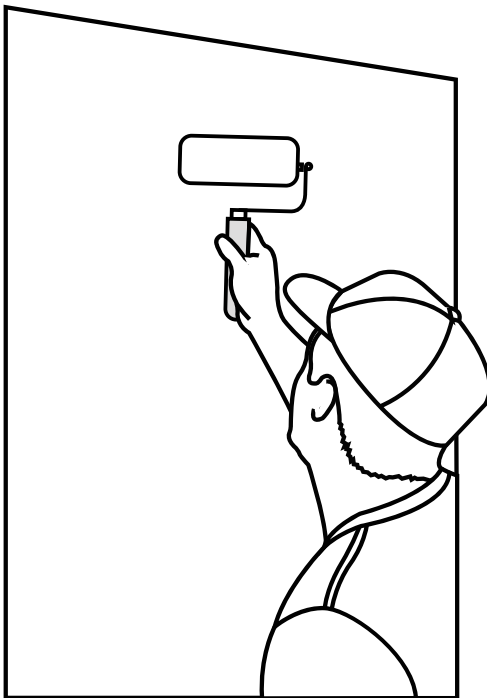

WALL PREPARATION


Prior to installation on drywall, paint the walls with Roman Pro-977 Ultra Prime Primer or comparable tinted close to the color of your product.

Walls should be mirror smooth (smooth and sanded).


Do not use sealing primer/do not install on sealed walls (no eggshell, satin or semi-gloss paints).

Walls must be completely dry before installation can begin.

3

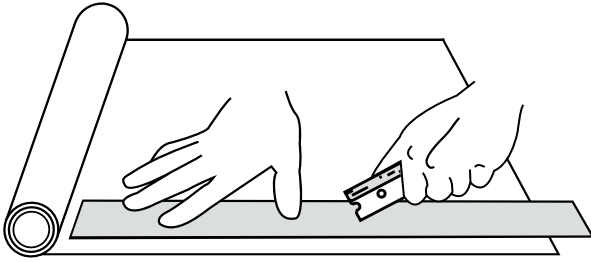

OR

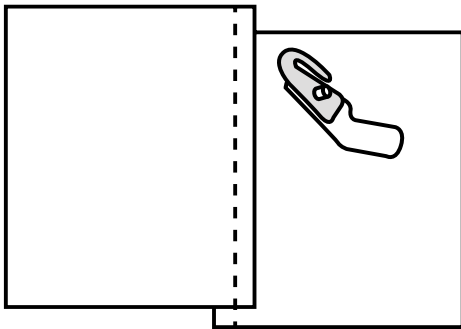

TRIMMING

Product **MUST** be table trimmed or double-cut on the wall.

Trim as little as possible off each edge.

Use a very sharp, single-edge razor blade. Use a new razor blade for each cut.

4



PASTING

Use Maya Romanoff Clear Strippable Adhesive MR-RA-888 or comparable.

Apply a generous, even coat of adhesive to backside of product and let relax.

Typical relaxing time is 2-3 minutes until adhesive tacks up. Perform a test on a small strip to determine appropriate relaxing time.

Allow the paste to soak into each sheet for the appropriate time before hanging in order to avoid bubbling, shrinking & seam opening.


Do not fold or crease the wallcovering.

Do not get paste on the face of the product. **If paste gets on the face of the product, do not scrub nor rub.** Instead, immediately gently wipe clean with a soft, damp cloth. Do not use paper towel on the product.



2-3
MINS

5

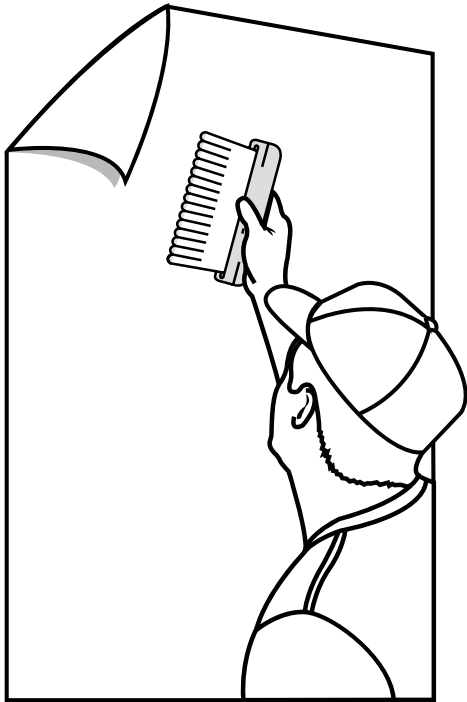

HANGING

Rolls are marked "TOP." **DO NOT** reverse hang.

Apply product to the wall using a soft-bristled nylon brush. **Do not use a stiff brush.**

Gently smooth product with brush to remove bubbles.


A seam roller may be used to set seams. Please take proper precaution.

Go back and ensure all bubbles are smoothed out before leaving. Any bubbles left upon completion of install will be permanent.

Use a corner seam roller to ease the material into moldings, casework, etc. prior to cutting the product.

This product is handmade. Slight color and/or pattern match variation may occur.

6

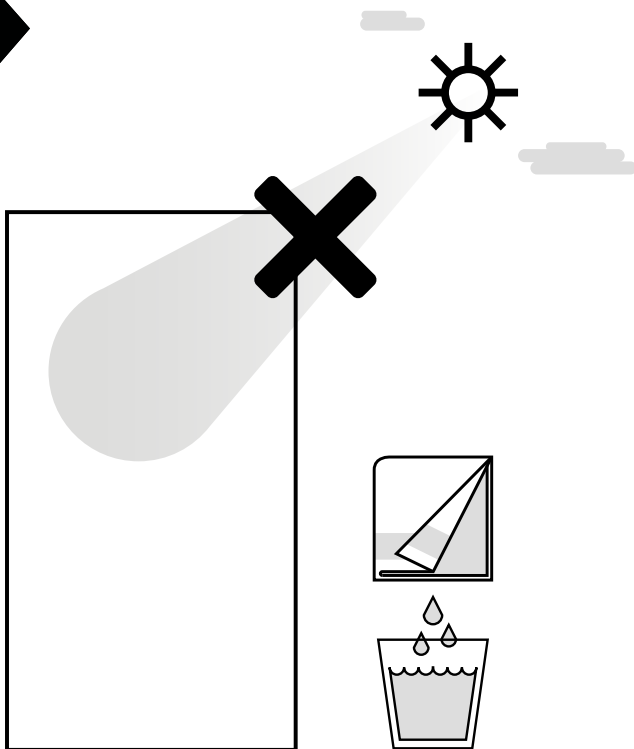

CARE & CLEANING

Avoid direct or reflected sunlight. Our wallcoverings are not guaranteed against fading or color change.

Maya Romanoff wallcoverings are formulated for dry-use areas.

Before cleaning any wallcoverings, test first on a small, inconspicuous area.

Avoid getting the wallcovering excessively wet.

Never use abrasive cleansers or steel wool as they will mar the surface.

Clean by blotting the soiled area with a soft, clean cloth, dampened with a mild solution of clear liquid detergent. Dry with a soft, clean cloth.

Do not use harsh cleaners, solvents, or chemicals of any kind to clean Maya Romanoff products unless following the guidelines outlined in our Care, Cleaning and Disinfecting document, available at [MayaRomanoffDropbox.com](https://www.mayaromanoff.com/dropbox). When used as directed, disinfectant wipes and diluted bleach/water solutions can be safe and effective sanitization methods for the majority of our wallcoverings.