

STOP

DO NOT INSTALL UNTIL YOU HAVE READ THESE GUIDELINES

Call Client Services at 1.773.465.6909 immediately if you encounter any difficulties or e-mail clientservices@mayarmanoff.com

GUIDELINES FOR INSTALLATION ON DRYWALL.* Materials may display certain irregularities that are inherent to the manufacturing process.

Starlit Lattice™

(MR-SL1 Series) MOP with Glass Bead Wall Tiles



SPECIFICATIONS

Tile Size Approx. 18" x 18" (45.7 x 45.7 cm), 1.5 sq ft/per tile (0.1 sq m/per tile)

Minimum Order 10 tiles

Order Increments 10 tiles

Repeat 6" W x 9" H (15.2 x 22.9 cm)

Custom Color 40 tile min. order

Custom Tile Size Contact Client Services


Fire Rating ASTM E84 Class A

Content Hand-inlaid, genuine, farmed seashells, Non-woven paper backing


RECOMMENDED TOOLS




Clean water




Razor Blades

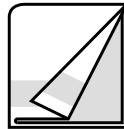


Soft cloth




Sponge



Plastic smoother

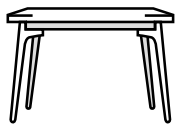


Table



Soft-bristled nylon brush



Steel straight edge

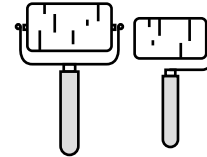

Seam roller & corner seam roller

WALL PREPARATION



Maya Romanoff Vinyl-Over-Vinyl Non-Strippable Adhesive MR-RA-555 or comparable & 1/2" nap roller





Roman Pro-977 Ultra Prime Primer or comparable

*Consult Client Services before you begin application on surfaces other than drywall.

02.23.2024

1

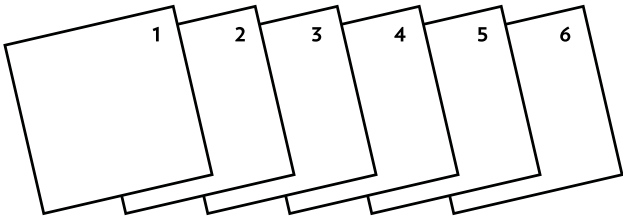

60-85°F
ONLY

GENERAL GUIDELINES

Boxes of tiles have been pre-graded and labeled accordingly on the back. **You must still grade for color flow within your installation.**

Tiles are marked "TOP." Install in one direction to avoid shading.

Inspect goods carefully.

Confirm you have the correct quantity and color of product before installing. Additional tiles from this dye lot may not be available.

Product is not seamless.

Install within 4 weeks from date of shipment.

No allowances will be made after four (4) tiles are installed.
No returns on cut goods.

No claims allowed for labor charges or consequential damages, under any conditions.


No claims allowed if lighting in area where product is hung is not finished/fully installed.

Product is not guaranteed against fading or color change.

Store uninstalled material between 60° - 85° F in a dry place.

Wallcovering **MUST** be installed in a climate controlled environment with an approximate constant temperature of 70°F and a relative humidity level of 50-55%.

2

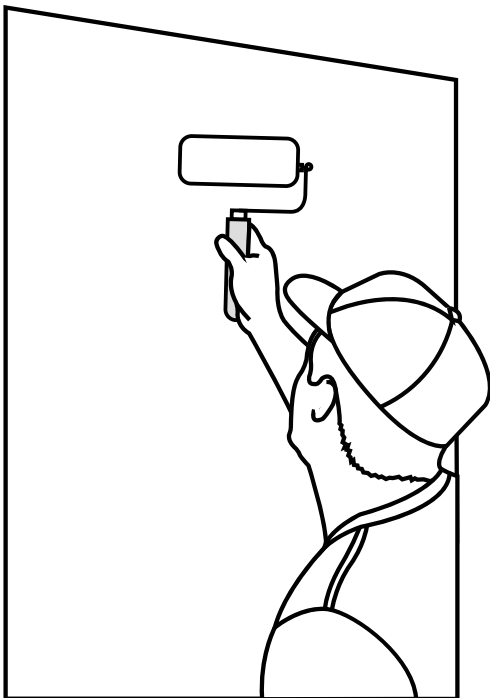

WALL PREPARATION


Prior to installation on drywall, paint the walls with Roman Pro-977 Ultra Prime Primer or comparable tinted close to the color of your product.

Do not use sealing primer/do not install on sealed walls (no eggshell, satin or semi-gloss paints).

Walls should be smooth and sanded. If walls are already sealed or have imperfections, consider hanging heavy-duty non-woven wall liner (available from Maya Romanoff) prior to installing the product. This is at the discretion of your installer.

Walls must be completely dry before installation can begin.

3

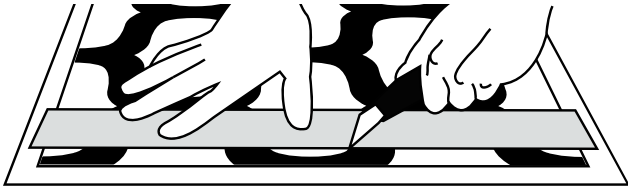


TRIMMING

Edges have been pre-trimmed for easy installation.

Use a very sharp, single-edge razor blade. Use a new razor blade for each cut.

When trimming is required, table-trim beaded portion from the **BACK SIDE**, and mother of pearl portion on the **FRONT SIDE**. This product **CANNOT** be double-cut on the wall.

4

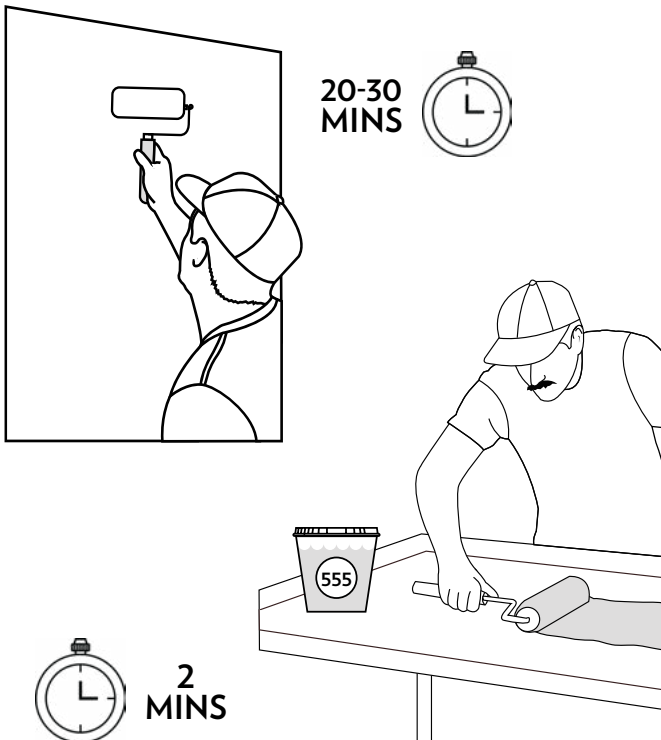

PASTING

Use Maya Romanoff Adhesive MR-RA-555 (Vinyl-Over-Vinyl Non-Strippable) or comparable.

Pre-pasted the wall and allow 20-30 minutes for paste to dry before hanging.

Apply a generous, even coat of adhesive to backside of product and let relax.

Typical relaxing time is 2 minutes, until adhesive tacks up. Perform a test on a small strip to determine appropriate relaxing time.

Allow the paste to soak into each tile for the appropriate time before hanging in order to avoid bubbling, shrinking & seam opening.

Do not crease the tiles.

Do not get paste on the face of the product. **If paste gets on the face of the product, do not scrub and do not rub.** Instead, immediately and gently wipe clean with a soft, damp cloth. Do not use paper towel, wet or dry, on the product.

5



HANGING

Tiles to be sidematched. Pattern can be hung horizontal or vertical. See diagram on Page 5 for hanging options

Apply product to the wall using a soft-bristled nylon brush.

DO NOT USE A STIFF BRUSH.

Gently smooth product with a plastic smoother to remove bubbles.


A seam roller may be used to set seams. Please take proper precaution. Use a corner seam roller to ease the material into moldings, casework, etc. prior to cutting the top or bottom of product.

Once product is adhered to the wall, warming seams with a hair dryer will allow the beads to be pushed tightly together (do not use a heat gun). Use care!

This product is handmade.

Slight color and/or pattern match variation may occur.

6

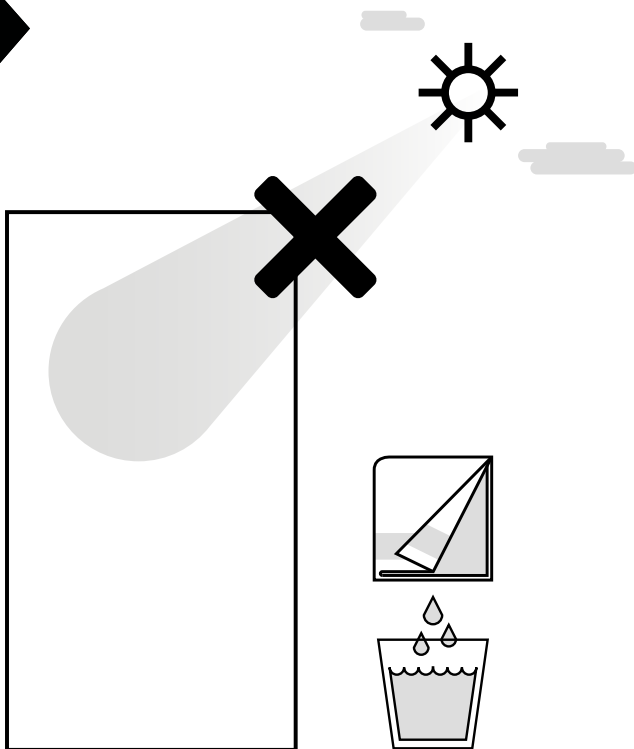

CARE & CLEANING

Avoid direct or reflected sunlight. Our wallcoverings are not guaranteed against fading or color change.

Maya Romanoff wallcoverings are formulated for dry-use areas.

Before cleaning any wallcoverings, test first on a small, inconspicuous area.


Avoid getting the wallcovering excessively wet.

Never use abrasive cleansers or steel wool as they will mar the surface.

Clean by blotting the soiled area with a soft, clean cloth, dampened with a mild solution of clear liquid detergent. Dry with a soft, clean cloth.

Do not use harsh cleaners, solvents, or chemicals of any kind to clean Maya Romanoff products unless following the guidelines outlined in our Care, Cleaning and Disinfecting document, available at [MayaRomanoffDropbox.com](https://www.mayaromanoff.com/dropbox). When used as directed, disinfectant wipes and diluted bleach/water solutions can be safe and effective sanitization methods for the majority of our wallcoverings.

Horizontal

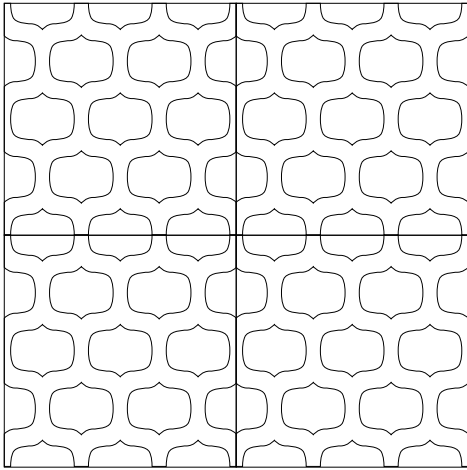

Vertical

